

Specifications

Battery Type: Lithium Polymer

Capacity: 7000mAh

Compatibility:

Any iPhone, iPod or iPad

Any Android Phone or Tablet

USB charging devices such as GoPro or 3DS

Input: DC 5V / 2.5A


Output: DC 5V / 1A , 5V / 2.5A

Package Contents

1 x SMPP704-D Power pad

1 x User Manual

1 x USB to Micro USB Charging Cable

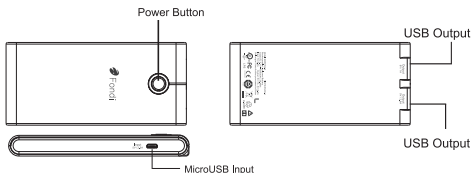

Instructions

1. To charge the SMPP704-D, plug the micro USB end into the Input port and plug the USB end into an active computer or a 5V AC/DC adapter. The Status Indicator will begin to flash.
2. To charge your electronic device, plug the USB end into the Output port and plug the micro USB end into your device. Press the Power Button to begin charging. If your device came with its own USB cable, we recommend using that cable to charge your device.
3. To check the status of your battery, press and hold the Power Button. The number of LEDs that light up indicate the current status of the battery.

1 LED: 0%-25%

2 LED: 25%-50%

3 LED: 50%-75%

4 LED: 75%-100%

General

1. To maintain optimal battery performance, discharge and charge the Power pad at least once every 3 months.
2. The Power pad will take longer time to fully charge when connected to a computer. We recommend charging the Power pad overnight. Using a 5V AC/DC adapter to charge the Power pad may reduce charging time.

Warranty Information

- Fondi offers a 1-year limited warranty for hardware defects.
- Warranty does not cover problems caused by misuse or mistreatment of the product.

WARNING

- Do not expose to moisture or hot climates for extended periods of time.
- Do not disassemble, puncture, drop or submerge in liquids.
- If bulging or bubbling develops, discontinue use immediately.
- Not for children under 3 years old.